

Tempering Valve Assemblies (High Performance)

TVA-HP




AVG
Australian Valve Group

Tempering Valve Assemblies

TVA-HP

TVA - High Performance (orange cap)

Suitable for solar + instantaneous hot water systems

Features

Designed for solar applications and instantaneous heaters
(PLEASE NOTE: Only the High Performance (orange cap) valves are suitable for solar applications.) TVA15CHP valves can also be used in all water heater applications as per TVA installation instructions

- Have been upgraded to include high-temperature components
- Maximum hot water supply temperature 99°C
- More accurate control: $\pm 3^{\circ}\text{C}$ from set temperature (to AS4032.2)
- Fast response to pressure fluctuations
- Forged DR brass body
- Advanced polymers for greater resistance to calcium deposits
- Integral 60 mesh stainless steel line strainers
- Integral non return valves
- Stainless steel springs
- O-ring seal union connectors
- Tamper proof adjustment
- Special adjusting tool supplied
- Seasonal adjustments not required
- Will supply 50°C mix with 55°C hot supply
- WaterMark Certification – License No. 20137




TVA15CHP-I



Valve Specifications

(20mm & 15mm TVA's)


Cold water supply temperature:	5°C - 25°C
Hot Water supply temperature:	65°C - 99°C
Adjustable outlet temperature range:	40°C - 50°C
Factory set temperature:	50°C nominal (Must be commissioned onsite by installer)
Accuracy of outlet temperature:	$\pm 3^{\circ}\text{C}$ - tested to AS4032.2
Minimum temperature differential (between hot supply and outlet temperature):	10°C
Supply pressure, static :	1600kPa maximum
Supply pressure, dynamic :	500kPa maximum
Supply pressure imbalance, dynamic : (at time of commissioning)-	2:1 maximum
Maximum permitted pressure variation in either supply in order to control outlet temperature to $\pm 3^{\circ}\text{C}$: (from supply pressure at commissioning)	10 % maximum
Flow rate minimum:	4 litres/min

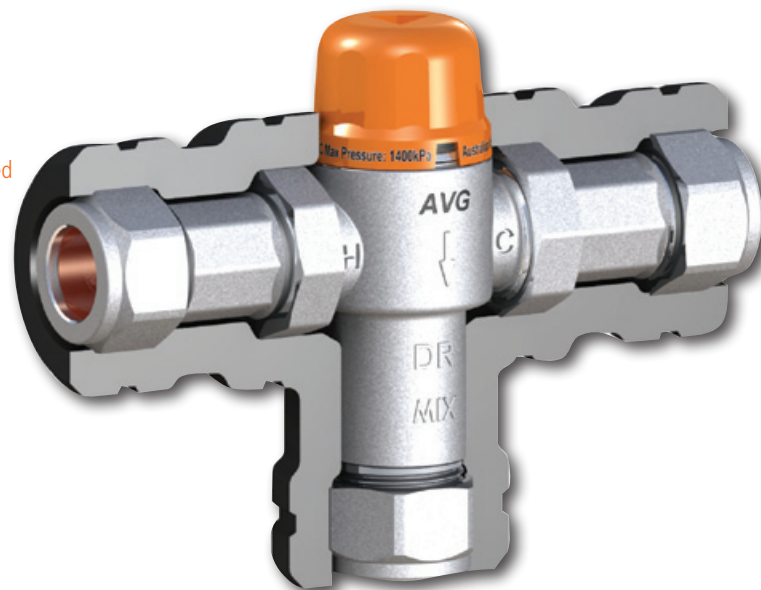

TVA20CHP-I

Suitable For Solar + Instantaneous Hot Water Systems

To ensure safety, the TVA must be installed and maintained strictly according to AVG's installation instructions, Australian Standards and local regulatory requirements. AS3500 now calls on all valves & pipe work to be insulated. AVG provide the insulation & cable ties with the tempering valves.

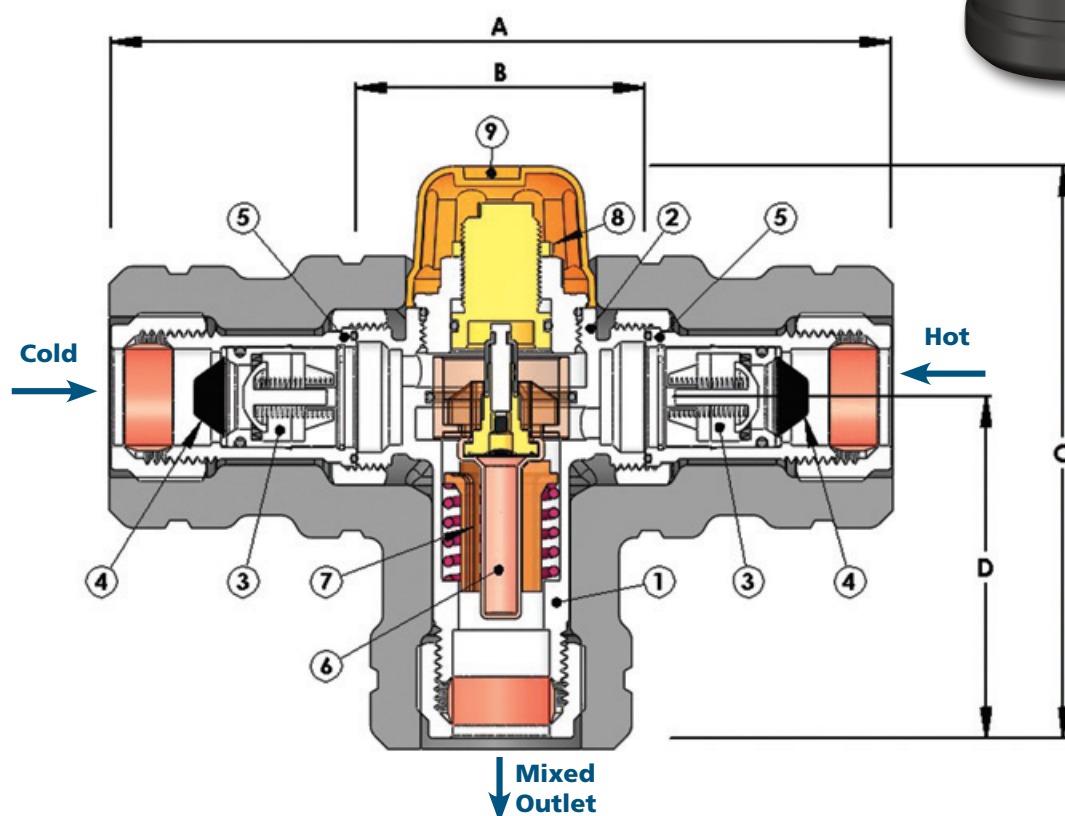

TVA-HP SPECIFICATIONS & FEATURES


MODEL	DN SIZE	A	B	C	D
TVA15CHP-I	15mm	144	58	113	67
TVA20CHP-I	20mm	147	58	112	66

1. Forged DR brass body
2. Compact body design
3. Integral non return valves in all models to enhance flow through the valve
4. Filters to prevent debris entering the valve
5. O-ring seal inlet union connectors complete with nuts and olives
6. Compact high performance probe provides smooth consistent hot water
7. Water flow directors inside the valve prevent turbulence and enhance flow
8. Locking mechanism to prevent tampering
9. Integrated adjustment tool in cap. No spanners to get lost

installation

INSTRUCTIONS

TYPICAL INSTALLATION OF CONTROLLED PRESSURE HOT WATER SYSTEM

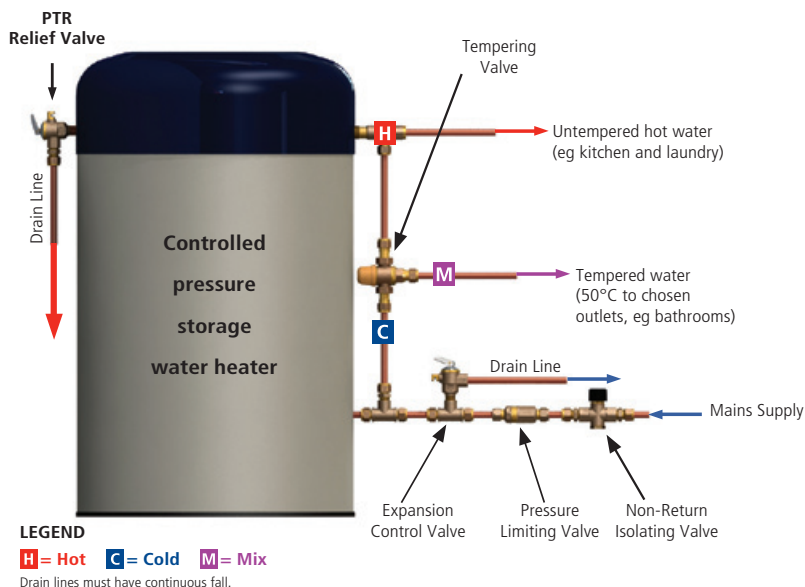

The tempering valve may be installed at the point of use, but there must be a minimum 1 metre pipe run between the valve and the outlet tap.

Caution: Water escaping from the drain line may be hot and could cause scalding. This valve is a Safety Valve. Excessive discharge from the drain line or operation of the small auxiliary relief valve opposite the drain can mean a malfunction within the system. Switch off the energy source and call a plumber or service person.

INSTALLATION

The tempering valve must be installed by a licensed plumber and in accordance with AS/NZS 3500, relevant local requirements and the following:


- Tempering valve must be fitted in accordance with the instructions supplied with the valve
- It is recommended that isolating valves are fitted immediately upstream of both hot & cold inlets to the tempering valve. This allows convenient access to isolate the tempering valve in the event that the strainers need to be cleaned
- It is recommended that the tempering valve be installed as close as possible to the point of use, however it may be fitted anywhere on the hot water supply line.
- If the tempering valve is fitted at the point-of-use, there must be a minimum one (1) metre pipe run between the valve mixed water outlet connection and the tap.

System Supply Pressures

Tempering valves provide optimum performance when installed with hot and cold water supplies of equal dynamic pressure, ie with the water flowing. (The static supply pressures often give no indication of the dynamic supply pressures). It is recommended that the hot and cold water supplies to each tempering valve be controlled via their own pressure control valve. In most domestic installations it should be possible to fit one control valve at the property boundary to control pressure to the whole site. For commercial installations it is recommended to fit a pressure control valve on each inlet to the tempering valve.

TEMPERATURE ADJUSTMENT

- Prior to adjusting the tempering valve it is necessary for the hot water heater to be switched on and delivering hot water at the recommended temperature. If the water heater has an adjustable thermostat it is recommended that the thermostat be set to 65°C. Ensure that the water heater has reached the set temperature before commissioning the tempering valve.
 - Test the mixed water temperature at the nearest outlet being supplied by the tempering valve. The tap should be opened to allow a flow rate of at least four (4) litres/minute.
 - A thermometer must be used to ensure the correct mixed water temperature is achieved.
 - Allow the water to run for at least one minute to ensure the mixed water temperature has settled after each adjustment.
 - To adjust the mixed outlet temperature of the tempering valve the cap should be removed to gain access to the adjusting spindle.
- Using the special tool moulded into the top of the cap rotate the adjusting spindle to achieve the required temperature. The spindle should be rotated - clock wise to reduce the temperature, anti-clock wise to increase the temperature - until the desired temperature is reached. See adjustment diagram provided with the valve.
- Once the required temperature is achieved the cap should be snapped onto the valve to prevent accidental adjustment.
 - When the tempering valve has been commissioned, the commissioning label must be completed by the installer and affixed to the water heater in a prominent position, (or other suitable position or as specified by the Local Authority).

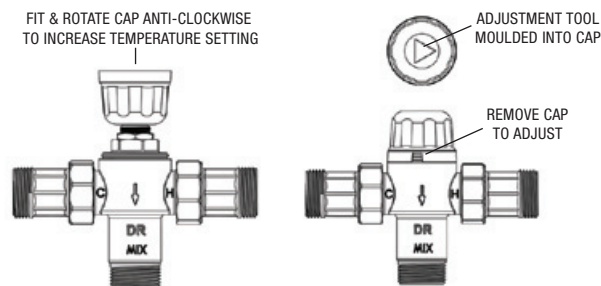

Tempering Valve Assemblies

AVG

Australian Valve Group

Australian Valve Group (Head Office)

Unit 2, 9-11 Noble St, Kewdale, Perth, Western Australia 6105

Fax: +61 8 9353 2689 Tel: 1800 AVG AUS (284 287)

FOR MORE INFORMATION VISIT OUR WEBSITE AT WWW.AVG.NET.AU